

- 1. Tilslut Vonets Wifi Repeater/Bridge til din computer med LAN og USB
- 2. Åben en webbrowsere vent ca. 60 sekunder til enheden booter og indtast adressen 192.168.254.254



3. Skriv brugernavn admin og password admin tryk på Login



4. Tryk på Wizard knappen

ONETS'

5. Tryk på Scan Hotspots knappen Vent på at enheden finder alle accesspoint i nærheden



Markerer det AP du vil tilslutte til, og tryk på Next

Operative Status	7	WiFi Hotspots				
Scan Hotspots 🛛 >>>						
WiFi Repeater	Sele the	ect a Wireless Network to network manually. Then,	o connect to. If not found, j , click Next .	please click Re f	f resh List , or ent	er the SSID of
		SSID	MAC	Channel	Signal	Band
System Settings		Mesn-test	C21/4:80:56:09:51	64	100(-310pm)	56
		[HiddenSSID]	c2:74:ad:6e:b9:51	64	100(-31dbm)	5G
LAN Catting		[HiddenSSID]	c2:74:ad:94:f8:2d	108	100(-33dbm)	5G
LAIV Settings		Mesh-test	c2:74:ad:a4:f8:2d	108	100(-34dbm)	5G
		Net-Com	c0:74:ad:5d:8b:fd	6	100(-32dbm)	2.4G
iming Function		Lys24syv.dk_guest	c2:74:ad:3e:42:8e	44	100(-46dbm)	5G
		Lys24syv.dk	c0:74:ad:3e:42:8e	44	100(-46dbm)	5G
		[HiddenSSID]	c0:74:ad:94:t8:2d	1	91(-540bm)	2.40
		1	-0.744-040-04	4	00/ 00-15	2.40
			there a	re 20 wireless net	work	
	0	SSID				
				(Refresh List	Next
				(



6. Skriv koden til netværket og set og fjer hakker som på billedet Tryk på Apply

erative Status	WiFi Hotspots			
can Hotspots 🛛 >>>	Security Settings			
WiFi Repeater	SSID Lys24syv.dk			
	Source WiFi hotspot password			
stem Settings	Transmission mode IP layer transparent O MAC layer transparent			
	The configuration parameters of WiFi repeater security is synchronized with source hotspot			
AN Settings	2.4G WiFi Repeater SSID Lys24syv.dk_2.4G_F8	Hardware		
uing Function	5G WiFi Repeater SSID Lys24syv.dk_5G_F8			
	DHCP Server Settings			
	DHCP Server isable(Recommended configuration) C Enable			
	Advanced Setting (For specific applications only) >>			
	In order to prevent network conflicts, after parameters are configured, please disable			
	DHCP server. Logging in page again will be failed because of 'Disable DHCP server', so please make sure the hotspot parameters are correct.			

7. Tryk på To Connect

perative Status	WiFi Hotspots	
Scan Hotspots >>	Security Settings	
	SSID	Lys24syv.dk
W1F1 Repeater	Source WiFi hotspot passw	vord
ystem Settings	Transmission mode	IP layer transparent O MAC layer transparent
	The configuration para	ameters of WiFi repeater security is synchronized with source hotspot
LAN Settings	2.4G WiFi Repeater S	SID Lys24syv.dk_2.4G_F8
iming Function	5G WiFi Repeater SSI	D Lys24syv.dk_5G_F8
	DHCP Server Settings	
	DHCP Server	Disable(Recommended configuration) C Enable
	Advanced Setting (For spe	ecific applications only) >>
mmB i meren	5G WIFI Repeater SSI DHCP Server Settings DHCP Server (Advanced Setting (For spe	Disable(Recommended configuration) Enable ecific applications only) >>



8. Tryk på Start Connect

ONE/S			((((😞)))) Operating Mo	ode:WiFi Bridge+Repeater 🚊	z Log
Operative Status >>>	Operative Status	Copyright Declaration				
Scan Hotspots	System Info					
	Device Name	VAP11AC				
WiFi Repeater	Hardware Version	VER5.0				
	Software Version	3.2.21.12.16 (Dec 17 2021 11:59:50	6)		
System Sattings	Operation Mode	Bridge (IP laye	Bridge (IP layer transparent)			
yotem ootempo	System Uptime	6 mins, 46 sec	S			
	Device Temperature	Device Temperature 53 °C				
LAN Settings	Current Hotspots Info					
	SSID	Lys24syv.dk				
iming Function	MAC Address					
	Security Mode					
	Encryption Type					
	Channel					
	Signal					
	Connection Status	Disconnected	Start Connect			
	Hotspots Memory List					
	SSID	Hotspot MAC		Band	Uplink NIC MAC	
	Lys24syv.dk	c0:74:ad:3e:42	:8e	5G		
						Clear

9. Vælg System Settings og tryk Reboot

ONETS	(((((● ()))) Operating Mode:WiFi Bridge+Repeater 主文 Logout
Operative Status	Reboot Device Advanced Setting Login Settings Firmware Upgrade
Scan Hotspots	Reboot Device
WiFi Repeater	Reboot Device Reboot
System Settings 🛛 >>>	
LAN Settings	
Timing Function	

- 10. Enheden genstartet og efter ca 2 min. er den forbundet til internettet. Bemærk at enheden IKKE længere svarer på webinterfacet.
- 11. Har du brug for at resette enheden trykke du på reest knappen i 5 sek. mens der er strøm på den.